

- Route the end of the temperature probe cable with the temperature probe thru the wall into the steam room as shown in Diagram 3.

IMPORTANT NOTE:


Do not strain, staple, pinch or otherwise damage the probe cable.

- With a minimal length of the cable exposed apply silicone (provided) to the hole in the wall as required to create a moisture seal as shown in Diagram 4.

- Push the temperature cable and bulb into hole as required to leave minimum 1/4", maximum 1/2" of the bulb exposed as shown in Diagram 4.

WARNING Insure a minimum of 1/4" of the temperature bulb is exposed to the air. Failure to do so may result in an inoperative control and a hazardous condition.

WARNING The exposed area of the temperature bulb must be free of silicone or any materials that prevent direct exposure to the steam room air. Failure to do so may interfere with the ability to sense temperature and may result in excessive steam room temperatures

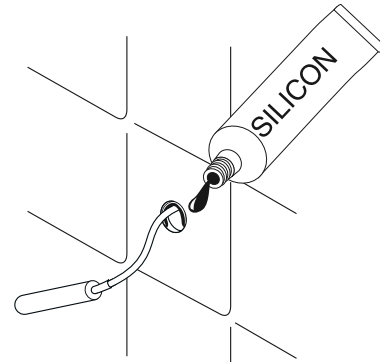

**Steam Room Interior
Diagram 3**



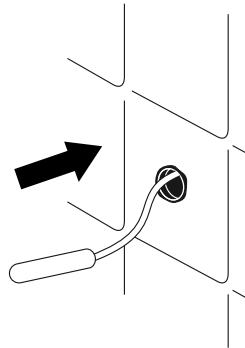


Diagram 4

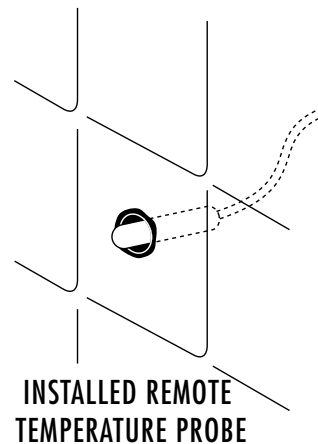

A Division of Sussman-Automatic Corporation
 43-20 34th Street, Long Island City, NY 11101 • (718) 937-4500
 1-800-767-8326 • Fax: (718) 472-3256 • www.mrsteam.com
Western Regional Offices
 9410 S. La Cienega Blvd., Inglewood CA 90301
 1-800 72 STEAM (1-800 727-8326) • Fax: (310) 216-2944

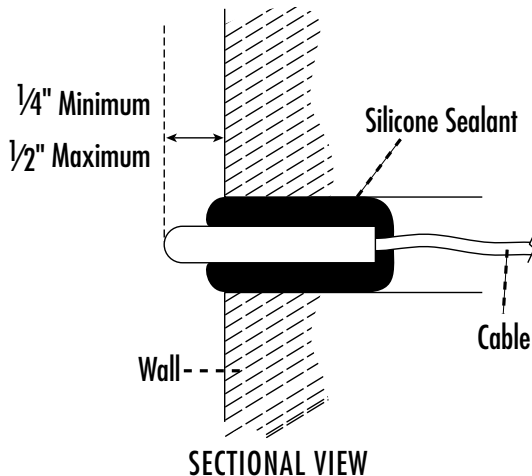

PUR 100386 Rev. 5/03